

Wilo-IF-Modul Stratos PLR

Fig. 1

- (D) Einbau- und Betriebsanleitung
- (GB) Installation and operating instructions
- (F) Notice de montage et de mise en service
- (NL) Inbouw- en bedieningsvoorschriften
- (E) Instrucciones de instalación y funcionamiento
- (I) Istruzioni di montaggio, uso e manutenzione
- (FIN) Asennus- ja käyttöohje
- (S) Monterings- och skötselanvisning
- (H) Beépítési és üzemeltetési utasítás
- (GR) Οδηγίες εγκατάστασης και λειτουργίας
- (CZ) Návod k montáži a obsluze
- (PL) Instrukcja montażu i obsługi
- (RUS) Инструкция по монтажу и эксплуатации
- (DK) Monterings- og driftsvejledning
- (N) Montasje- og bruksanvisning



www.wilo.com/automation

Fig. 2



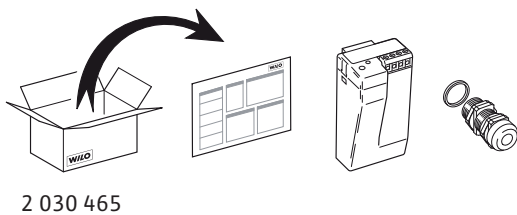


Fig. 3

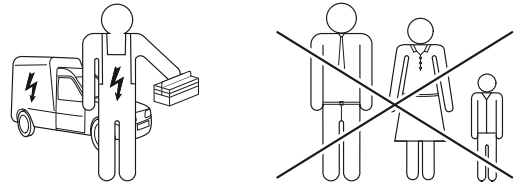


Wilo-IF-Modul Stratos PLR

Fig. 4

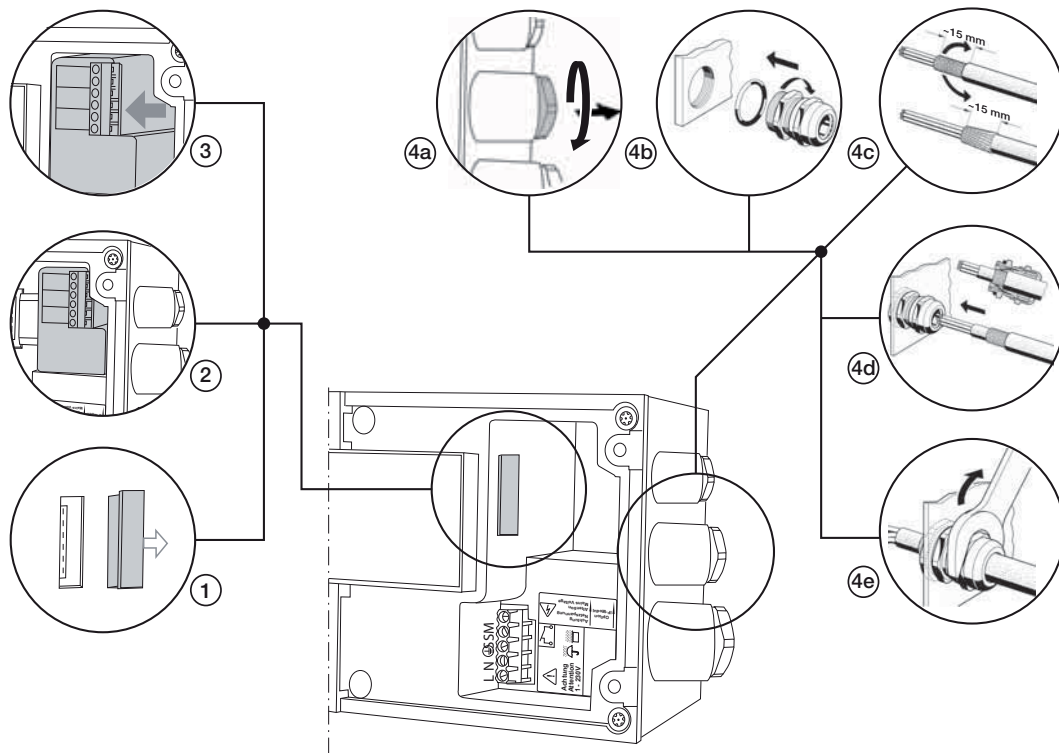

1 x IF-Modul Stratos PLR

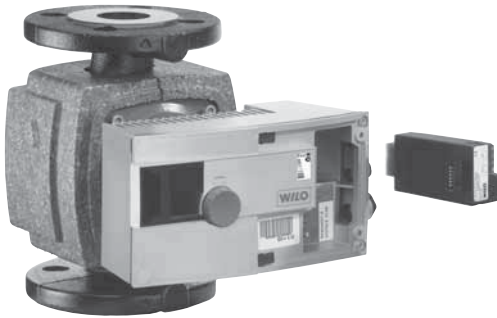

Wilo-Stratos/Stratos-Z

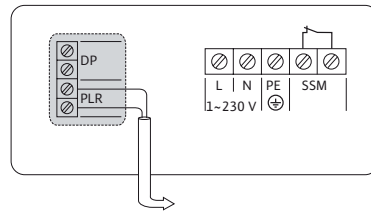


Fig. 5



2 x IF-Modul Stratos PLR



Wilo-Stratos/Stratos-D/Stratos-Z/Stratos-ZD

